



CHANGE THE PASSWORD

Open the APP "RottnerUNLOCK"

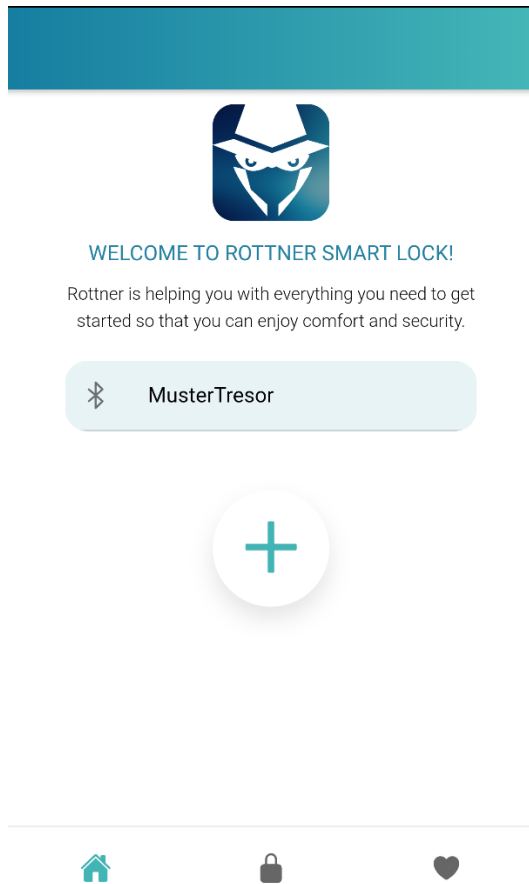

Select the lock for which the password should be changed

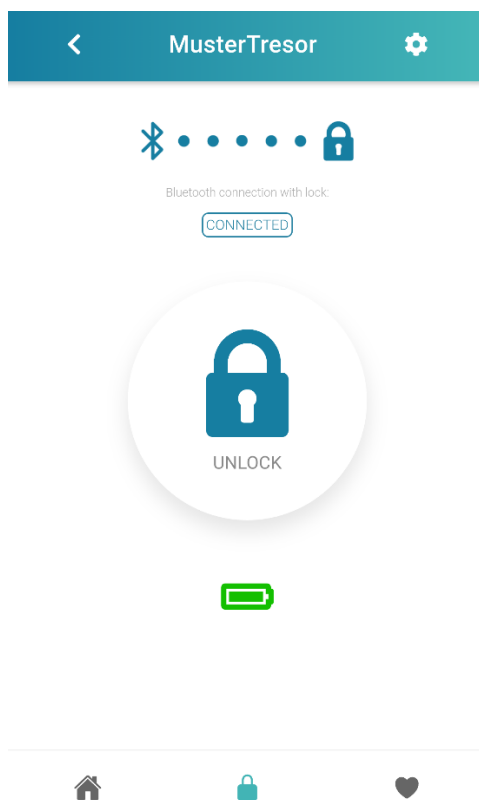

Press 

Press "CHANGE PASSWORD"

Name: MusterTresor

Id: FB:FE:C9:1B:D0:3A

CHANGE PASSWORD

Security level ⓘ

Password	<input type="radio"/>
OneClick	<input checked="" type="radio"/>
Fingerprint	<input type="radio"/>
Proximity	<input type="radio"/>

🔄 SHOW QR-CODE

+ ADD CONNECTION

DELETE DEVICE



The new password is transmitted to the lock as soon as you save it. Make sure that the lock is turned on during the saving process and that it is within working range.

Old password: ex. '000000'

New password: ex. '000000'

Confirm new password: ex. '000000'

CHANGE PASSWORD




- Enter the currently valid password under “Old password” (0-0-0-0-0-0 on delivery).
- Enter the new 6-digit password you have chosen for "New password"
- Retrieve the new password you have chosen under "Confirm new password"
- Now press "CHANGE PASSWORD" to confirm your new password.


"Password changed successfully" is displayed

ISSUE ADDITIONAL ACCESS RIGHTS FOR THE VALUE RETAINER


- 1) Download the APP "RottnerUNLOCK" from the Google Playstore (Android) or APP Store (IOS) and install it.
- 2) Open the APP "RottnerUNLOCK"

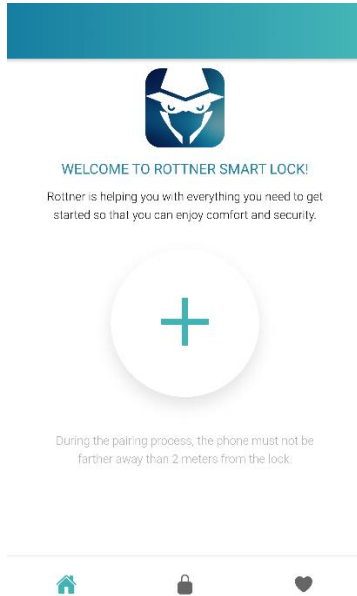

Press the "+," button to add a Smartlock.

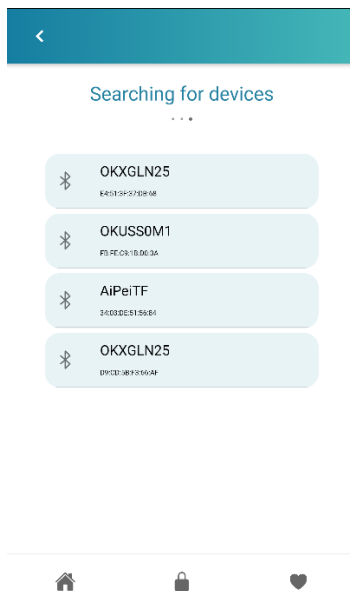

Select the appropriate Smartlock.

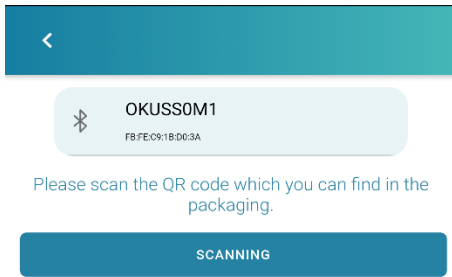

Press "Scan"



Scan the QR code on the cover of the battery compartment "

<

Name: OKUSS0M1

Id: FB:FE:C9:1B:D0:3A

Password: ex. '000000'

Repeat password: ex. '000000'

Security level ⓘ

Password	<input type="radio"/>
OneClick	<input type="radio"/>
Fingerprint	<input type="radio"/>
Proximity	<input type="radio"/>

Add connection


🏠 🔒 ❤️


Assign a name for the selected Smartlock under Name "(e.g. sample safe)

Enter the factory password (0 - 0 - 0 - 0 - 0 - 0).

Confirm the factory password (0 - 0 - 0 - 0 - 0 - 0) !! ATTENTION !! For security reasons, we recommend that you change the factory password as soon as possible to a personal 6-digit code

Select the desired opening type for the Smartlock under the item "Security level".

- Password: The Smartlock is opened when the "RottnerUNLOCK" app is open by entering the previously assigned password.
- OneKlick: The Smartlock is opened when the "RottnerUNLOCK" app is open by pressing the "  " button.
- Fingerprint: The Smartlock is opened with the "RottnerUNLOCK" APP open using a fingerprint
- Environment: The Smartlock is opened when the "RottnerUNLOCK" APP is open and the mobile phone is within a radius of no more than 2 meters.

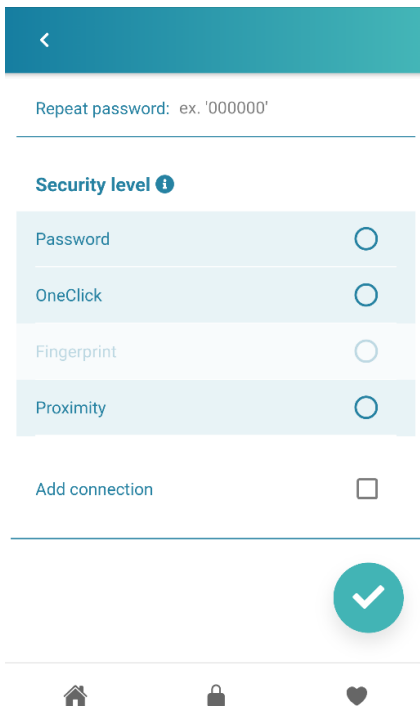


You can now add a shortcut for your Smartlock on the start screen



Save the settings made by pressing

OPEN THE VALUE CONTAINER USING THE APP - EXAMPLE: Open with "One click"
Open the APP "RottnerUNLOCK"

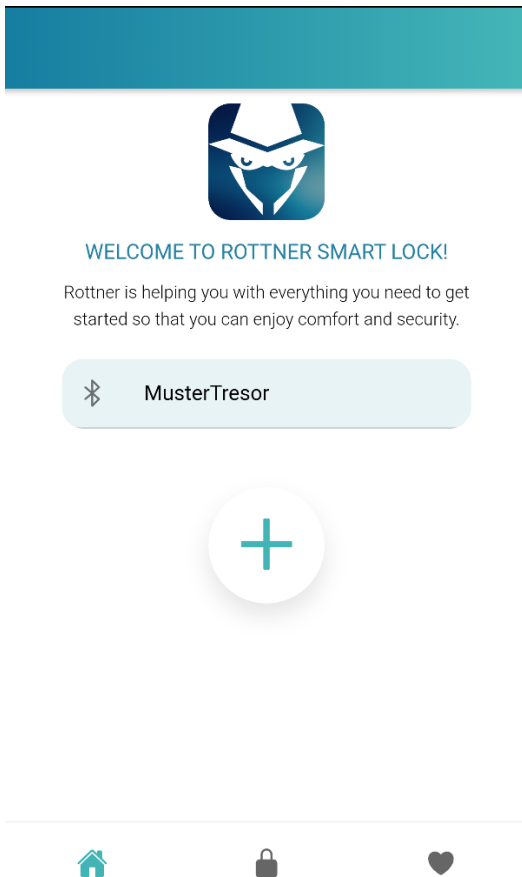


Choose the lock you want to open



Bluetooth connection with lock:

CONNECTED



Press 



Bluetooth connection with lock:

CONNECTED




Unlock successful

The lock is now unlocked - turn / push the twist grip of your safe as far as it will go.

OPENING THE VALUE CONTAINER WITH SHORTCUT



Press the shortcut for the relevant safe

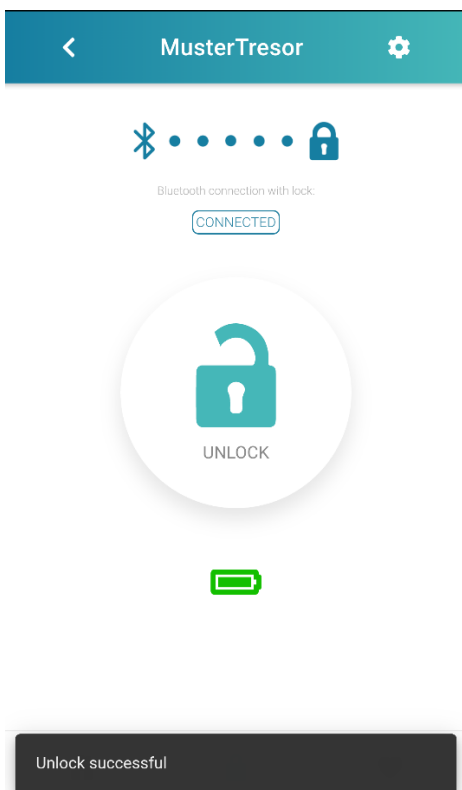

Unlock successful

A connection to the electronic lock is automatically established and unlocked. Now turn / push the rotary handle as far as it will go to open your safe.

LOCKING THE VALUE CONTAINER

Lock the door and turn / slide the opening handle as far as it will go. Make sure that your safe is properly locked.

MECHANICAL EMERGENCY OPENING

If the batteries are empty or electronic opening is not possible, proceed as follows:

1. Remove the cover of the emergency opening lock on your vault
2. Insert one of the two emergency opening keys provided
3. Turn the emergency opening key clockwise as far as it will go
4. Turn / slide the opening handle as far as it will go and open the door.
5. Turn the emergency opening key back to the starting position and remove it

LOCKING THE VALUE CONTAINER

Lock the door and turn / slide the opening handle as far as it will go.
Make sure that your safe is properly locked.

BATTERY CHANGE

1. Open the battery compartment on the inside of the door.
2. Remove the inserted batteries.
3. Install two [2] new high quality 1.5 volt AA batteries.
4. Make sure that the polarity of the batteries is correct to avoid damage to the electronics

NOTE:

The use of non-alkaline batteries is NOT ADVISED.